

## Bombardier Global 5000/6000 Database Reference Sheet

### Global 5000/6000

#### Version 4.x

<u>Database Name</u>	<u>As Appears On Download Account</u>
Navigation Database	J42 World
Fusion EMaps (Airspace/Airways, Cities/ Towns, Obstacles and GeoPolitical)	Fusion EMaps
Fusion Enroute Charts	Fusion Enroute
Fusion Graphical Weather – XM or Datalink	Fusion XM GWx <u>OR</u> Fusion DL GWx
Fusion Synthetic Vision – Airport/Runway Database	Fusion SVS_Apt-RWY
Fusion Synthetic Vision – Obstacle Database	Fusion SVS_Obstacle
Fusion Threat Database (TPMA -210)	Fusion TAWS TDb - T03
Fusion Envelope Database (TPMA -210)	Fusion TAWS EDb - T03
Fusion High Resolution Terrain Database	<i>Factory Loaded. No Web Download Available. Update via Service Bulletin</i>

### Global 5000/6000

#### Version 5.x

<u>Database Name</u>	<u>As Appears On Download Account</u>
Navigation Database	J61 World
Fusion EMaps (Airspace/Airways, Cities/ Towns, Obstacles and GeoPolitical)	Fusion EMaps
Fusion Enroute Charts	Fusion Enroute
Fusion Graphical Weather – XM or Datalink	Fusion XM GWx <u>OR</u> Fusion DL GWx
Fusion Synthetic Vision – Airport/Runway Database	Fusion SVS_Apt-RWY
Fusion Synthetic Vision – Obstacle Database	Fusion SVS_Obstacle
Fusion Threat Database (TPMA -210)	Fusion TAWS TDb - T03
Fusion Envelope Database (TPMA -210)	Fusion TAWS EDb - T03
Fusion High Resolution Terrain Database	<i>Factory Loaded. No Web Download Available. Update via Service Bulletin</i>
Airport Surface Database (Airport Moving Map)	Fusion Airport Surface-2